

# AJT DESIGN TOYOTA STEERING WHEEL TRIM - INSTALLATION INSTRUCTIONS

## SHOWN FOR TUNDRA

REVA 11/18/2021

### Step 1:

Remove the negative battery terminal using 10mm wrench (or other size as appropriate per application). This is an important safety precaution to ensure the air bag does not deploy during installation.




### Step 3:

Loosen screw with T30 torx bit and driver, this will be tight (both sides). The screw will remain retained when fully loose.



### Step 2:

Carefully remove side covers with pry tool (both sides).

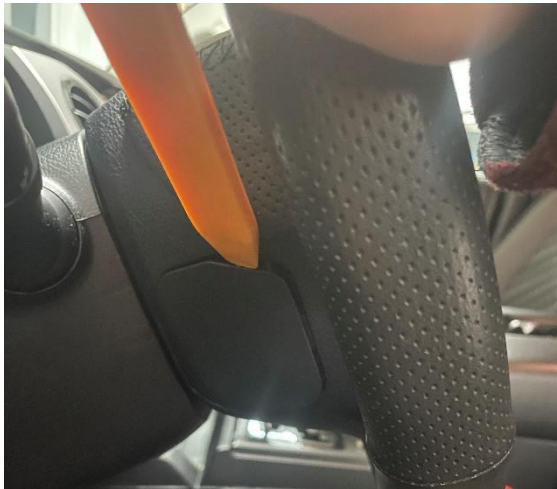

### Step 4:

Pull airbag up and place as shown, do not disconnect wiring. It may be necessary to slightly pull the torx screws to fully release airbag, do not force.



### Recommended tools: (not included)

- T30 Torx bit and driver
- 10mm wrench (to remove battery terminal)
- Pry tool
- #2 Phillips screwdriver

### NOTES:


Make sure to remove negative battery terminal before attempting this installation! AJT DESIGN assumes no responsibility for injury or death due to airbag deployment during installation.

**AJT**  
**DESIGN**  
[www.ajtdesign-llc.com](http://www.ajtdesign-llc.com)

## SHOWN FOR TUNDRA

### Step 5:

Remove and retain (4) screws with #2 phillips screwdriver.

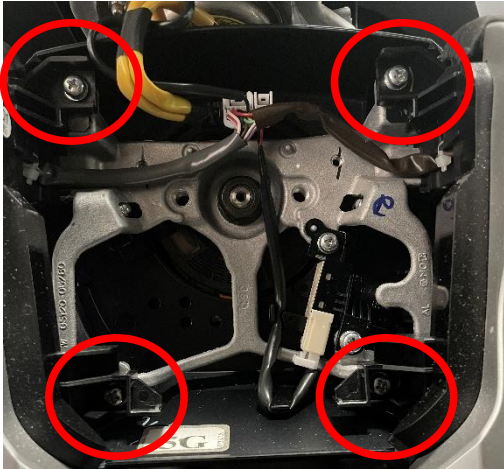


### Step 6:

Pull side assemblies loose.



### Step 7:

Remove and retain (3) screws with #2 phillips screwdriver. Remove factory trim piece and be careful to keep remaining pieces together, do not lose buttons, gasket, circuit board, etc. Place new trim piece in place and re-install screws. Screws are self-tapping, do not overtighten. (Both sides)

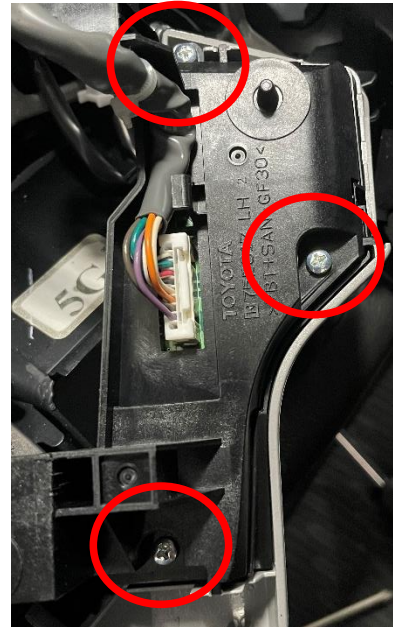

### Step 8 Re-assembly:

Re-assembly is the reverse of steps 1-6. Tighten remaining 4 phillips screws and 2 torx screws securely.